

INSTALLATION INSTRUCTIONS

BEFORE INSTALLING OR ADJUSTING THIS PRODUCT,
PLEASE READ THESE INSTRUCTIONS CAREFULLY.
PLEASE KEEP THIS GUIDE FOR FUTURE REFERENCE

MPN NO.	SAP NO.	DESCRIPTION
WNC-00052-02	181770335	DIN 49075 Fascia & Bezel 50 x 50mm unloaded







Figure 1

C6A Keystone Jack (Part No KSJ-00079)

Figure 2

DIN 49075 Fascia and Bezel 50 X 50mm unloaded. (Part No. WNC-00052-02)


Terminate the Keystone Jack (KSJ-00079) by following the cable colour coding instructions provided with the jack.

Once terminated, rotate the C6A Keystone Jack so that the RJ45 key latch points upwards as shown in figure 3.



Figure 3

Snap the small metal jack seating latch into the fascia first and then snap the large white seating latch into the bottom of the fascia a shown in figure 4.

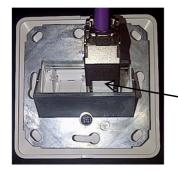

Large white jack seating latch

Figure 4.

Screw the Fascia to the back box, and then snap the Bezel over the Fascia figure 5.



Figure 5.

MPN NO.: 215-455	SAP NO.: 187000448	AS-18700-142	REV-01, 2014/05/29
© 2013 Molex	http://www.n	MTS2014-0091	