# molex

# STREAMLINE AND SQUARE WALLPLATE INSTALLATION INSTRUCTION

#### 1.0 SCOPE

This document will describe the installation instructions for straight and square 1P, 2P, 4P & Angled 1P, 2P Streamline and square wall plates.

### 2.0 PROCEDURE:

#### 2.1 ASSEMBLY INSTRUCTIONS

#### 2.1.1 ASSEMBLY INSTRUCTIONS FOR THE WALL PLATES (FIG. 1, 2,3,4,5 & 6):

1. Hold the wall plate so the arrow on the base is pointing up.

2. Install the jack from the back of the wall plates - engage the two latches at the bottom of jack with the latches provide in the Wall plate jack holder and press it until you get click sound

- Mount the wall plate using screws.
  Put the wall plate cover to the base.
- 5. Insert the wall plate label inside the label holder and lock it (Not applicable for 4P wall plate).


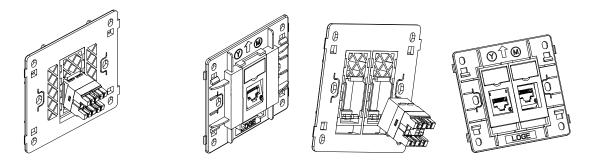


FIG. 1

#### 2.1.2 STREAMLINE AND SQUARE 1P WALL PLATE:

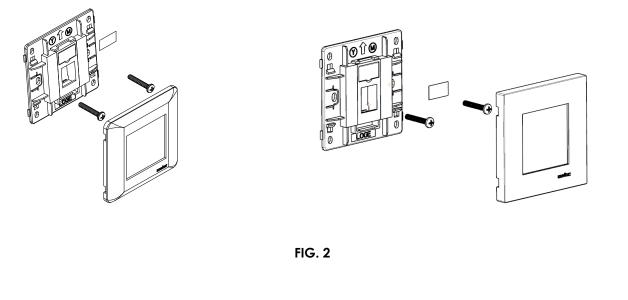

ENGINEERING RECORD	SAP NO: <b>187000426</b>	Doc No: <b>AS-18700-120</b>	Doc part: AS	REV- D		
NO: 673222	http://www.molexces.com			REV-D		
MPN/FMT-042 (2019/DEC/23 REV-03).						
THIS INFORMATION IS CORRECT AS AT THE TIME OF PUBLICATION, SPECIFICATION ARE SUBJECT TO CHANGE.						

#### 2.1.2 STREAMLINE AND SQUARE 2P WALL PLATE:

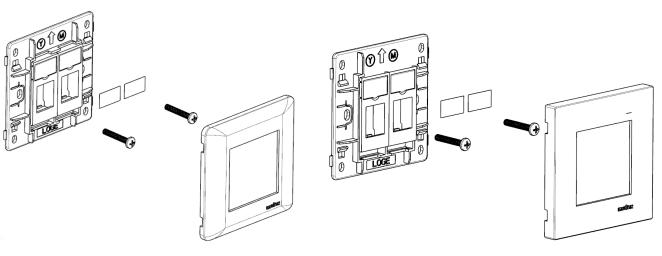


FIG. 3

#### 2.1.3 STREAMLINE AND SQUARE 4P WALL PLATE:


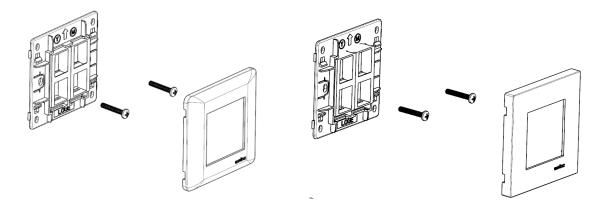


FIG.4

2.1.4


MPN/FMT-042 (2019/DEC/23 REV-03).

## STREAMLINE AND SQUARE 1P ANGLED WALL PLATE

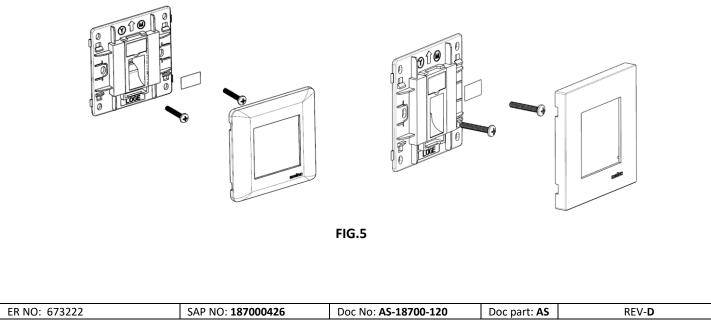

2.1.5

STREAMLINE AND SQUARE 2P ANGLED WALL PLATE

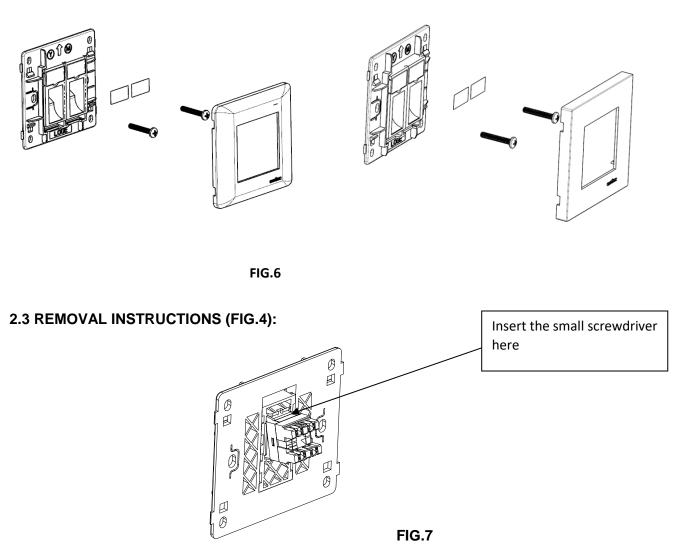

 Place the tip of a small screwdriver between the large tab and the edge of the plate and gently pry upwards.
 Lift the jack up

# 2.4 FIXING THE WALLPLATE ON THE WALL / GANGBOX

- 1. Remove the cover from the Wall plate.
- 2. Fix the screws provided with the pack and screw it tight to the wall / gang box.
- 3. Fix the frame back on the Wall plate.

ER NO: 673222	SAP NO: <b>187000426</b>	Doc No: <b>AS-18700-120</b>	Doc part: AS	REV- <b>D</b>
MPN/FMT-042 (2019/DEC/23 REV-03).				SHEET No. 3 of 3